

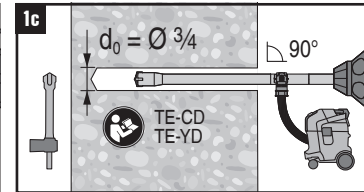


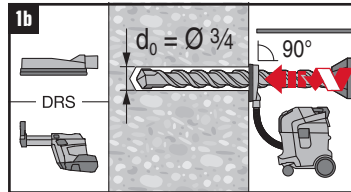


KWIK HUS-EZ



423833 A4-10.2017

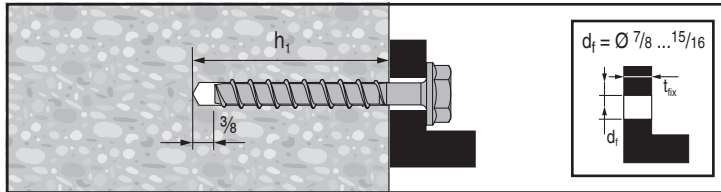

KWIK HUS-EZ	h_1^*	t_{fix}
$\frac{3}{4} \times 4\frac{1}{2}$	$4\frac{7}{8} - t_{fix}$	0... $\frac{1}{2}$
$\frac{3}{4} \times 5\frac{1}{2}$	$5\frac{7}{8} - t_{fix}$	0... $1\frac{1}{2}$
$\frac{3}{4} \times 7$	$7\frac{3}{8} - t_{fix}$	0... $\frac{3}{4}$
$\frac{3}{4} \times 8$	$8\frac{3}{8} - t_{fix}$	0... $1\frac{3}{4}$
$\frac{3}{4} \times 9$	$9\frac{3}{8} - t_{fix}$	0... $2\frac{3}{4}$

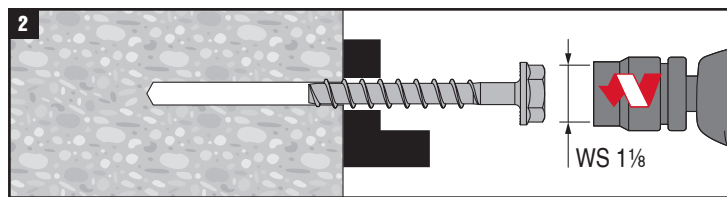

2.1		
SIW 22T/18T-A	✓	✓
	115 ft-lb	70 ft-lb

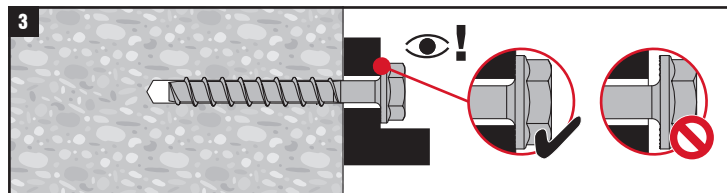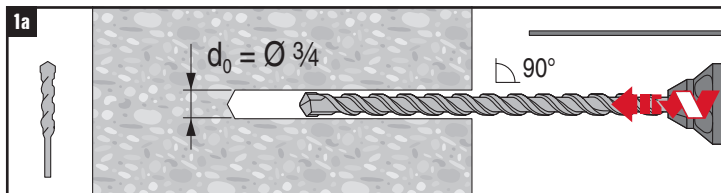

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.